

FLUKE®

TruTest™
Data Management Software
Getting Started Guide

Introduction to TruTest™

TruTest Data Management Software (the Software) is a new generation of software for managing electrical system testing data. The Software supports data from Fluke DMS software or from Beha-Amprobe ES Control software and these databases can be automatically converted. The Software supports these instruments:

- Fluke 6500
- Fluke 6500-2
- Beha-Amprobe GT-600
- Beha-Amprobe GT-650
- Beha-Amprobe GT-800
- Beha-Amprobe GT-900
- Fluke 1653
- Fluke 1654
- Fluke 1662
- Fluke 1663/1663+
- Fluke 1664 FC/1664 FC+
- Telaris ProInstall-100
- Telaris ProInstall-200
- SMFT-1000

The Software uses hierarchical tree topology to represent clients, sites, locations and appliances. Each element is presented as a single tree node. Each node properties are presented after selection. You can maintain the tree topology using these functions: add node, delete node, duplicate node, duplicate subtree and node edit.

The Software makes sure that measurement data:

- Is collected from instruments or from files transferred from instruments
- Can be manually added
- Is automatically assigned to hierarchical tree topology
- Is represented in the form of printable certificates (designed in accordance with national standards) and reports

Note

Some parts of the program can be changed without notice in newer software versions, and therefore, might differ from the information in this manual.

Safety Information

This software does not contain any safety related content.

How to Contact Fluke

Fluke Corporation operates worldwide. For local contact information, go to our website: www.fluke.com.

To view, print, or download the latest manual or manual supplement, go to our website. To register your product, visit <http://fluke.com/register>.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
+1-425-446-5500
info@fluke.com

Software Installation

Type	System Requirements
Operating System	<ul style="list-style-type: none">• Windows 10/11, 64-bit and 32-bit (recommended)• Windows 8/8.1, 64-bit and 32-bit• Windows 7 with Service Pack 1, 64-bit and 32-bit
System Memory	<ul style="list-style-type: none">• Minimum 4 GB RAM (64-bit) or 2 gigabyte (GB) RAM (32-bit)
Hard Disk Space	<ul style="list-style-type: none">• Minimum 2 GB available hard disk space
Display Resolution	<ul style="list-style-type: none">• Minimum screen resolution 1366 x 768
Communication Interfaces	<ul style="list-style-type: none">• USB

The Software is built with .NET Framework. You may use .NET Framework 4.6.1 or newer: <https://dotnet.microsoft.com/download/dotnet-framework/net461>.

To convert existing databases from ES Control and DMS, see the *Users Manual*.

Software Installation Procedure

1. Choose an installation file to download:
<https://www.fluke.com/en-us/support/software-downloads/trutest-software-downloads>
<https://www.beha-amprobe.com/en/support-service/software>

Note

Prior the installation start, close all running programs.

2. Use file explorer to browse to the installation file. Double-click the **.exe** file.
3. Follow the installation instructions displayed on the screen.
4. Start the Software.
The License wizard starts.
5. Click **Activate your license**.
6. Choose how to activate the license.
 - **Activate Online** if you are connected to the Internet
 - **Activate Offline** if you are not connected to the Internet.
7. Enter the Activation key.
8. Click **Activate license key**.

For more details, see the section *Activate the License* in the *Users Manual*.